


Mamas & Papas®

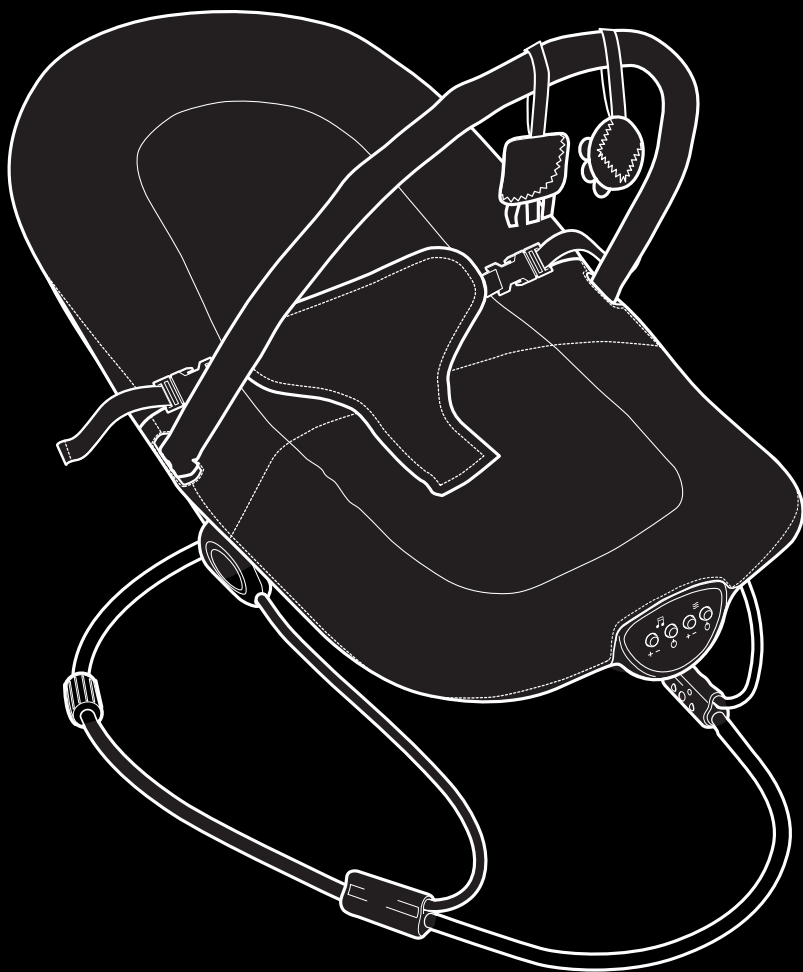

jelly stripe bouncer

JSBC_0010_0311_V1

© Mamas & Papas (Holdings) Ltd. 2011

IMPORTANT! KEEP FOR FUTURE REFERENCE

- **WARNING:** Never leave your child unattended.
- **WARNING:** Do not use the reclined cradle once your child can sit unaided.
- **WARNING:** This reclined cradle is not intended for prolonged periods of sleeping.
- **WARNING:** It is dangerous to use this reclined cradle on an elevated surface, e.g. a table.
- **WARNING:** Always use the restraint system.
- **WARNING:** Never use the toy bar to carry the reclined cradle.
- This reclined cradle is suitable for children up to a maximum weight of 9kg.
- This reclined cradle does not replace a cot or bed. Should the child need to sleep, then it should be placed in a suitable cot or bed.
- Do not use the reclined cradle if any components are broken or missing.
- Do not use accessories or replacement parts other than those approved by Mamas & Papas.
- Occasionally clean the metal and plastic parts with a proprietary polish. Do not use abrasives or bleach.
- The fabric may be sponged clean on the frame or removed for washing. Check the attached wash care label for more information.
- Prolonged and direct exposure to the bright sunlight can change the fabrics colours. Try to limit if possible.

Battery Safety Information

Only an adult should access the battery compartment. Ensure that the battery compartment is securely closed before the product is used by a child.

Use only batteries recommended and insert them correctly.

Battery terminals are not to be shorted.

Do not mix old and new batteries. Do not mix batteries of different types.

Do not attempt to recharge non-rechargeable batteries.


Rechargeable batteries must be removed from the product before being recharged.

Recharging batteries must be carried out by an adult.

Remove batteries and dispose of them at an official waste disposal site. Do not burn or place in house hold waste.

Exhausted batteries must be removed from the sound and movement box.

COMPONENTS

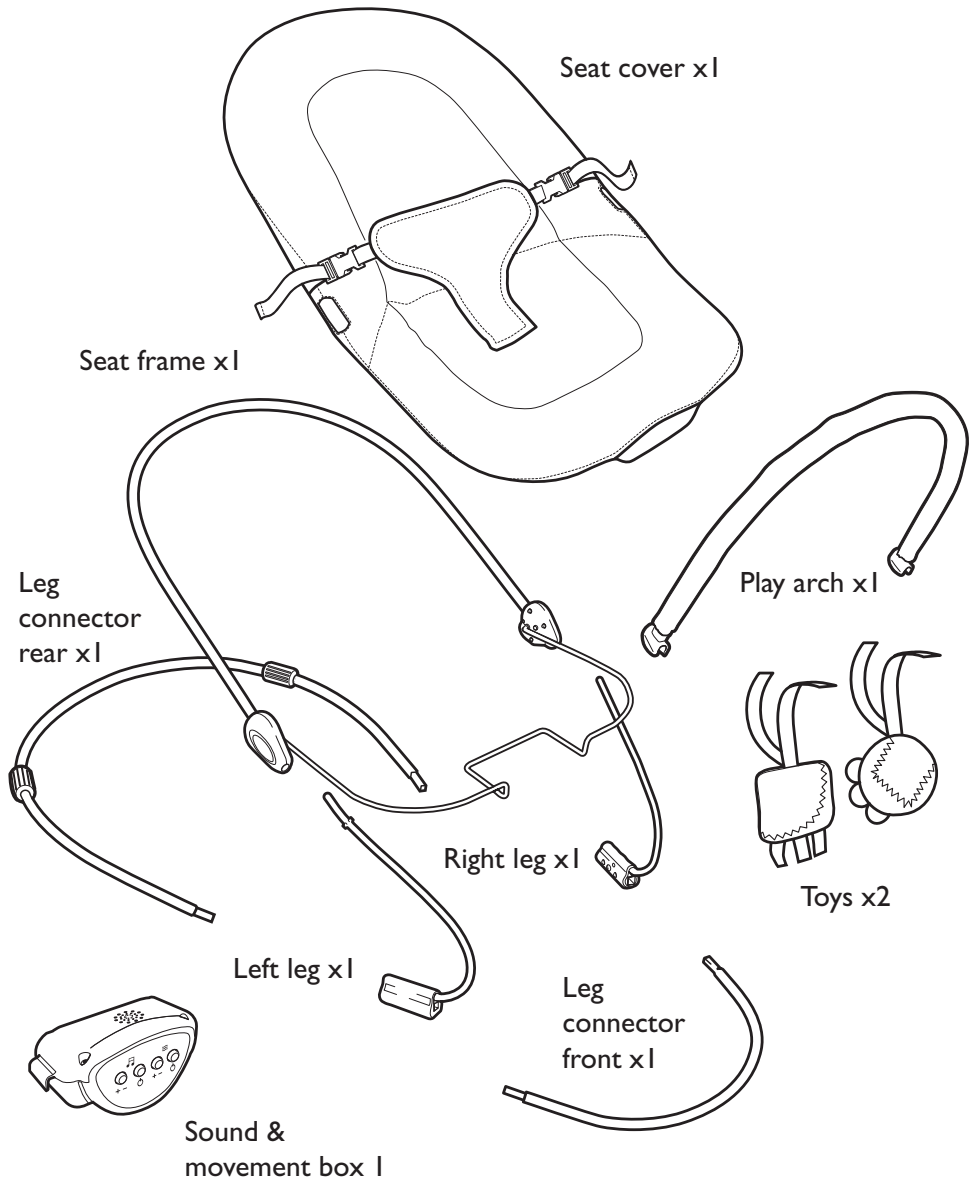


After sales Service: If you need assistance, spare parts or you are unhappy with any aspect of the goods please contact **Customer Care on: +44 (0)845 268 2000**, or e-mail us at: customer.care@mamasandpapas.com. Visit our website at www.mamasandpapas.com for the latest product information.

IMPORTANT: Images shown may vary from items purchased.

ASSEMBLING THE FRAME

A: Slide the rear leg connector into the left and right legs. Once connected, slide the front leg connector into the left and right legs.

B: Slide the top of the legs into the pivots on the seat frame. Ensure the legs are fully inserted into the pivots on the seat frame.

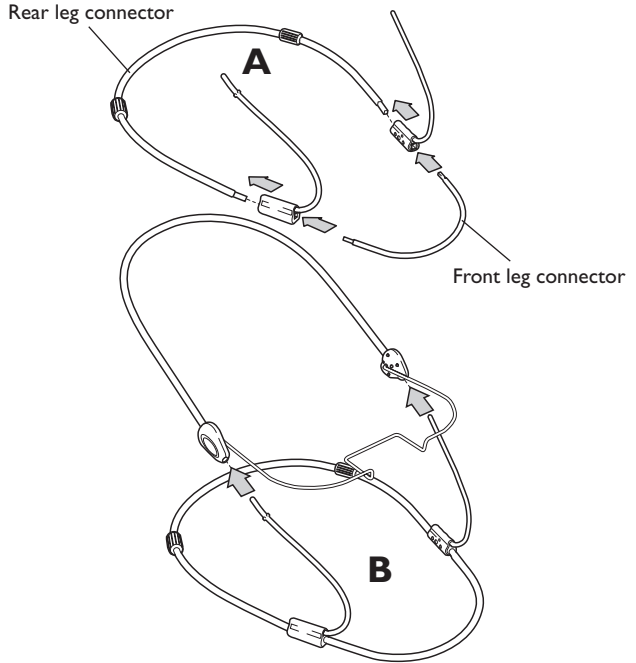


FITTING THE SEAT COVER

A: Slide the seat cover over the back of the seat frame.


B: Lift the front section of the seat frame upwards and slide the front of the seat cover over it.

C: Push down on the front section of the seat frame down.

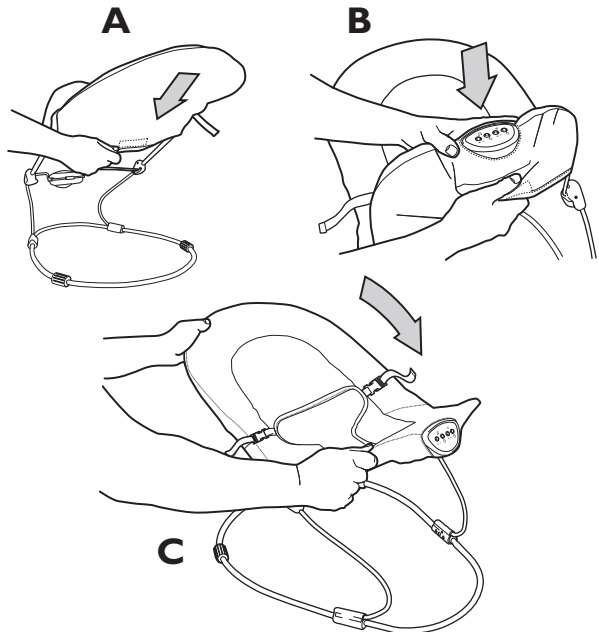


FITTING THE PLAY ARCH

A: Slot the two plastic clips on the ends of the play arch over the seat frame above the two pivots.

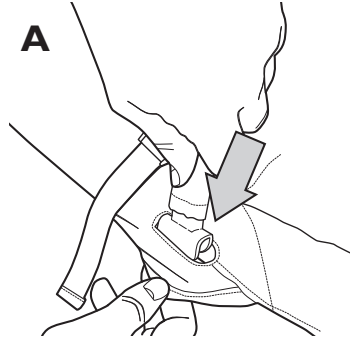

B: Attach the toys to the play arch by looping the straps over the play arch and fastening the velcro pads together.

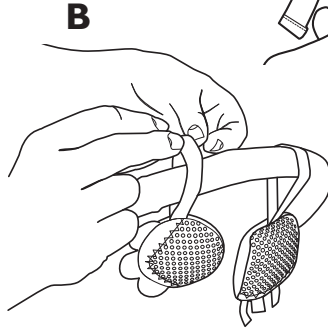


BATTERY INSTALLATION

Turn the sound and movement box upside and remove the screw holding the battery cover in place using a small cross-head screwdriver.

Insert two AA batteries as shown on the plastic moulding in the battery compartment.

Ensure the batteries are correctly inserted. Incorrectly fitted batteries may damage the unit.


Refit the battery cover.

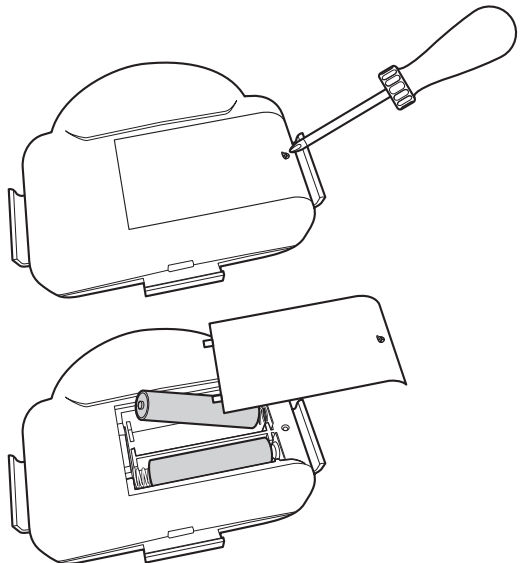

OPERATING THE SOUND & MOVEMENT BOX




Switching the vibration feature on & off


A: Press the button above the  icon to turn on. Press again to turn off.

B: Press the button above the **+** **-** icon to increase or decrease the vibration.


A

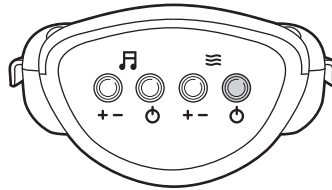

B

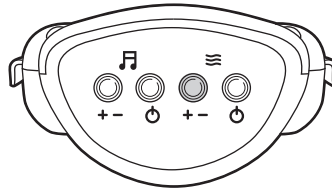


Switching the sound feature on & off


A: Press the button above the  icon to turn on. Press again to turn off.

B: Press the button above the **+** **-** icon to increase or decrease the volume.

A

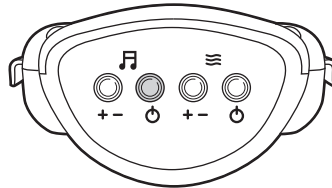


B

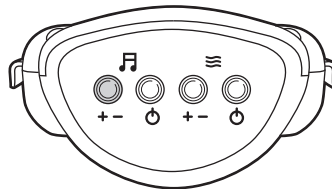

FITTING THE SOUND & MOVEMENT BOX

Slot the sound and movement box onto the front section of the frame.

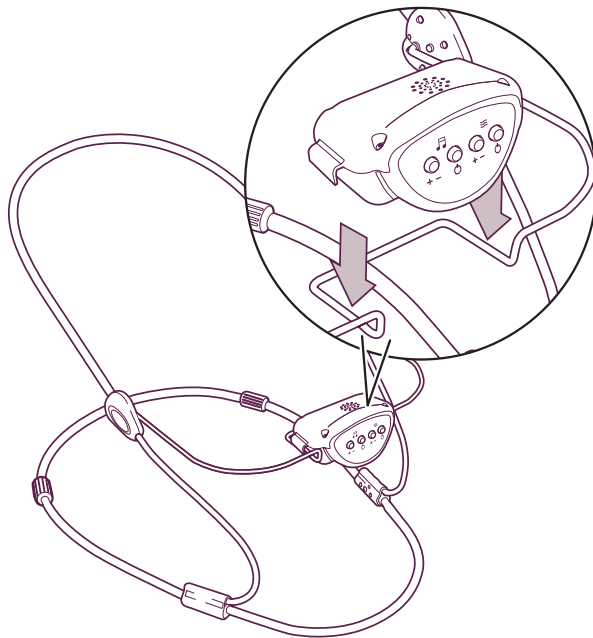


USING AND ADJUSTING THE HARNESS

Never place your child in the seat without fitting and adjusting the safety harness.

A: Locking the harness Push the locking catch **1** into the buckle **2** until it clicks into place. Repeat the process for the lock on the other side.

B: Releasing the harness Push the two tabs **3** on the locking catch inwards whilst pulling the two sections apart.

C: Adjusting the harness length To loosen the harness feed the webbing back through the locking catch. To tighten the harness pull the free ends of the webbing outwards **4**.

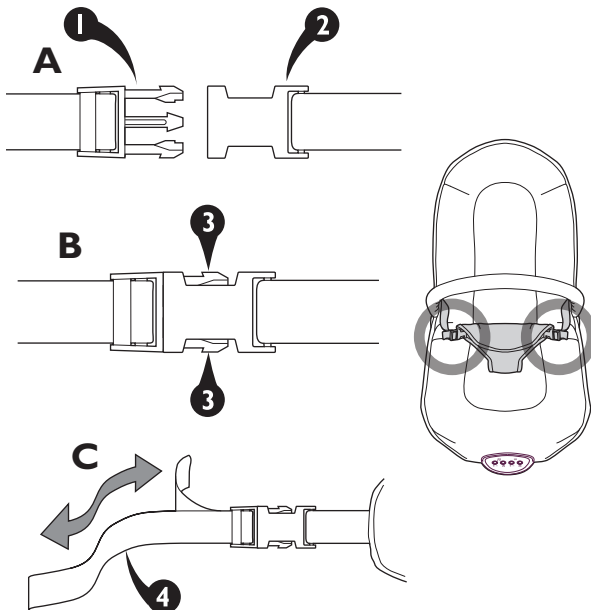



+44 (0)845 268 2000

Mamas & Papas Ltd, HD5 0RH, UK
customer.care@mamasandpapas.com
mamasandpapas.com