


Mamas & Papas®

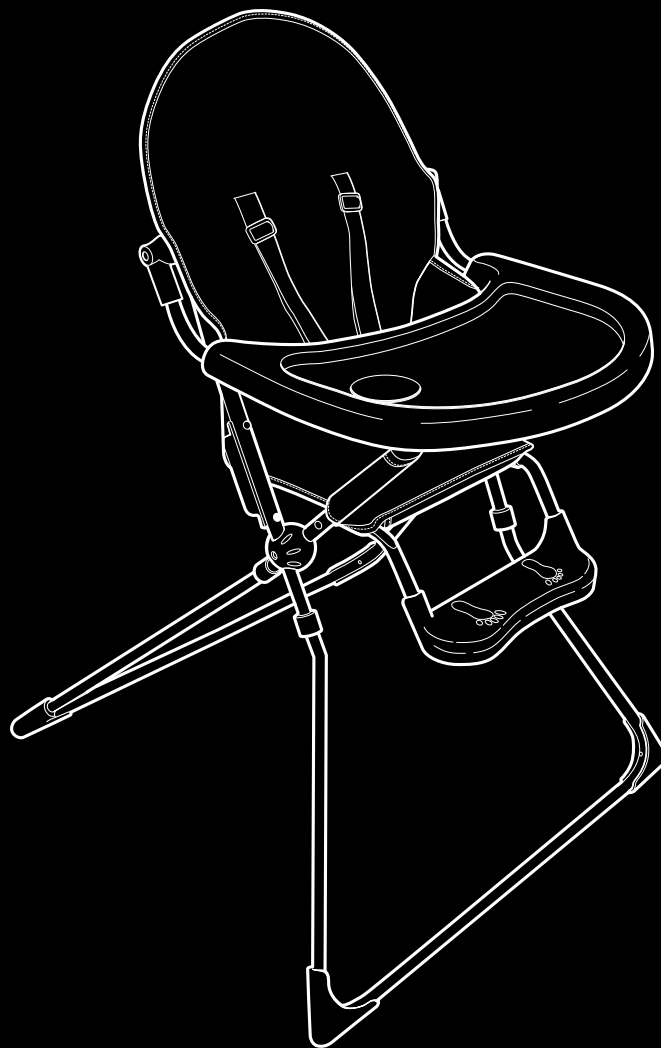

din dins highchair


AFHC_0019_0911_V2
© Mamas & Papas (Holdings) Ltd. 2011

INSTRUCTIONS FOR SAFE USE

IMPORTANT! KEEP FOR FUTURE REFERENCE

- **WARNING:** Do not leave the child unattended.
- **WARNING:** Ensure that the harness is correctly fitted and adjusted when the child is in the highchair.
- **WARNING:** Do not use the highchair unless all components are correctly fitted and adjusted.
- **WARNING:** Beware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires etc. in the vicinity of the highchair.
- This highchair is only suitable for children who can sit up unaided.
- Do not to use the high chair if any part is broken, torn or missing.
- The highchair can be cleaned using warm water and a mild soap. Never use bleach or abrasive cleaners.
- The highchair is suitable from 6 months to 3 years.

COMPONENTS

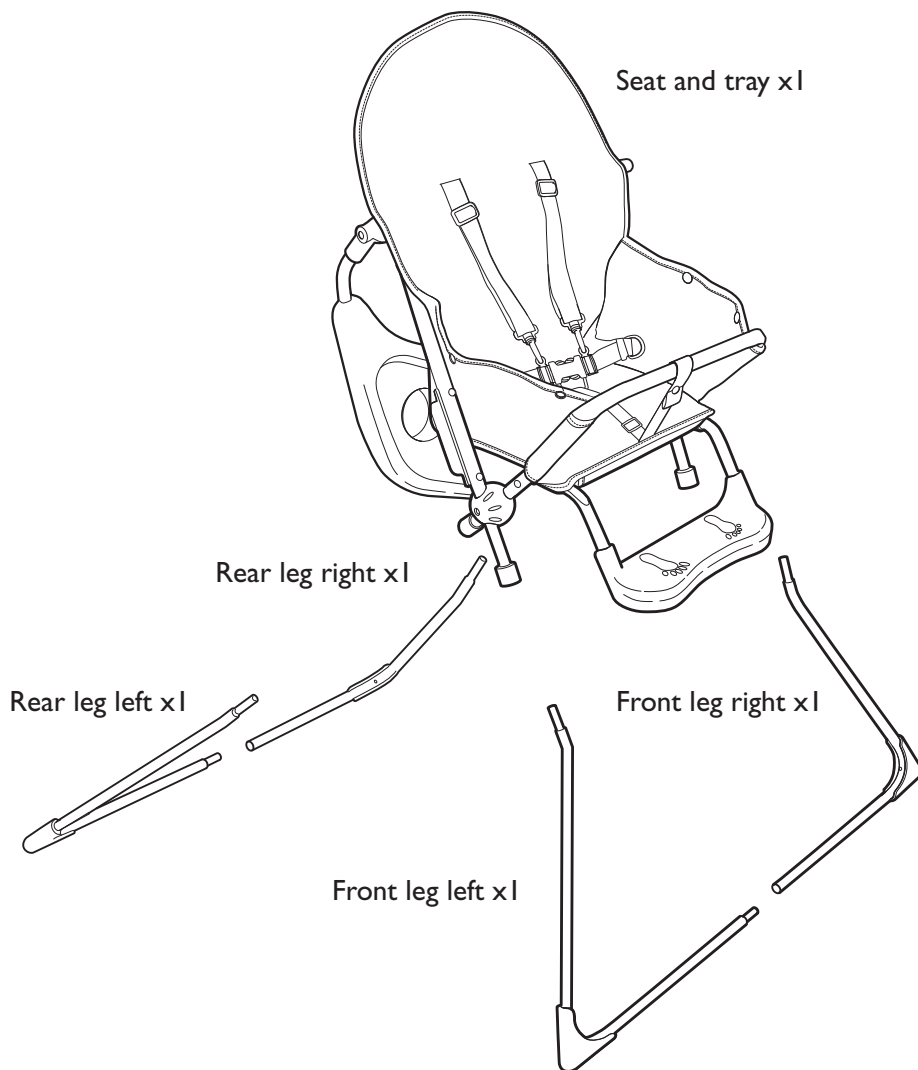

After sales Service: If you need assistance, spare parts or you are unhappy with any aspect of the goods please contact **Customer Care on: +44 (0)845 268 2000**, or e-mail us at: customer.care@mamasandpapas.com. Visit our website at www.mamasandpapas.com for the latest product information.




IMPORTANT: Images shown may vary from items purchased.

ASSEMBLING THE SEAT

A: Slide the arms into the back of the high chair.

B: Press down on the silver spring clips and push the tray into place.

C: Push the tray until the spring clips lock into place.

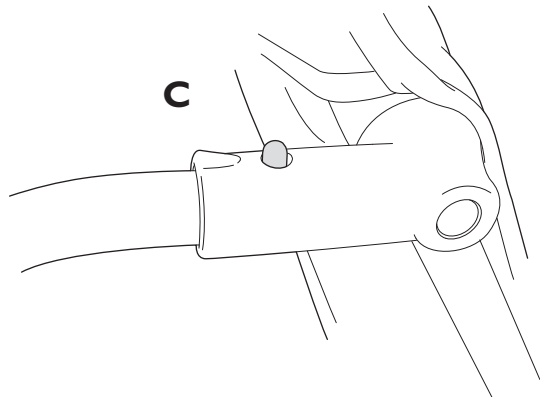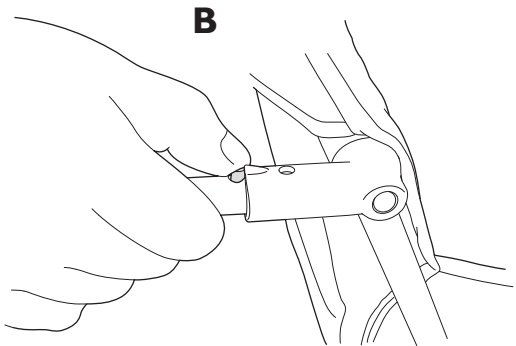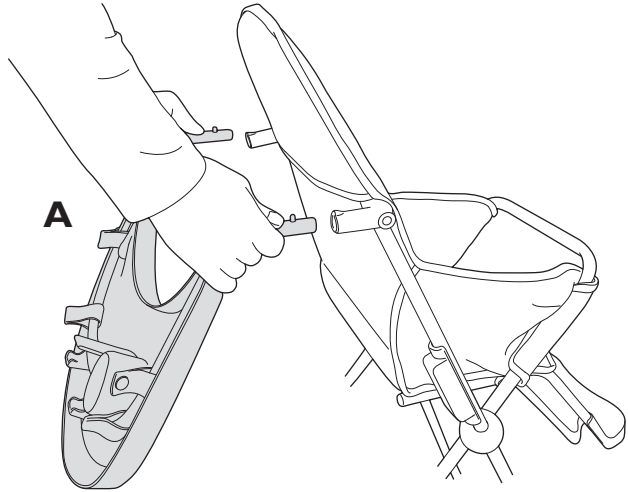


ASSEMBLING THE FRAME

A1: Slide the rear left leg into the rear right leg until the pin springs through the location hole (fig 1).

A2: Slide the front left leg into the front right leg until the pin springs through the location hole (fig 1).

B: Slide the top of the legs into the pivots on the seat frame. Ensure the legs are fully inserted into the pivots on the seat frame.


C: Flip tray over into correct position. Ensure tray is engaged on frame correctly.

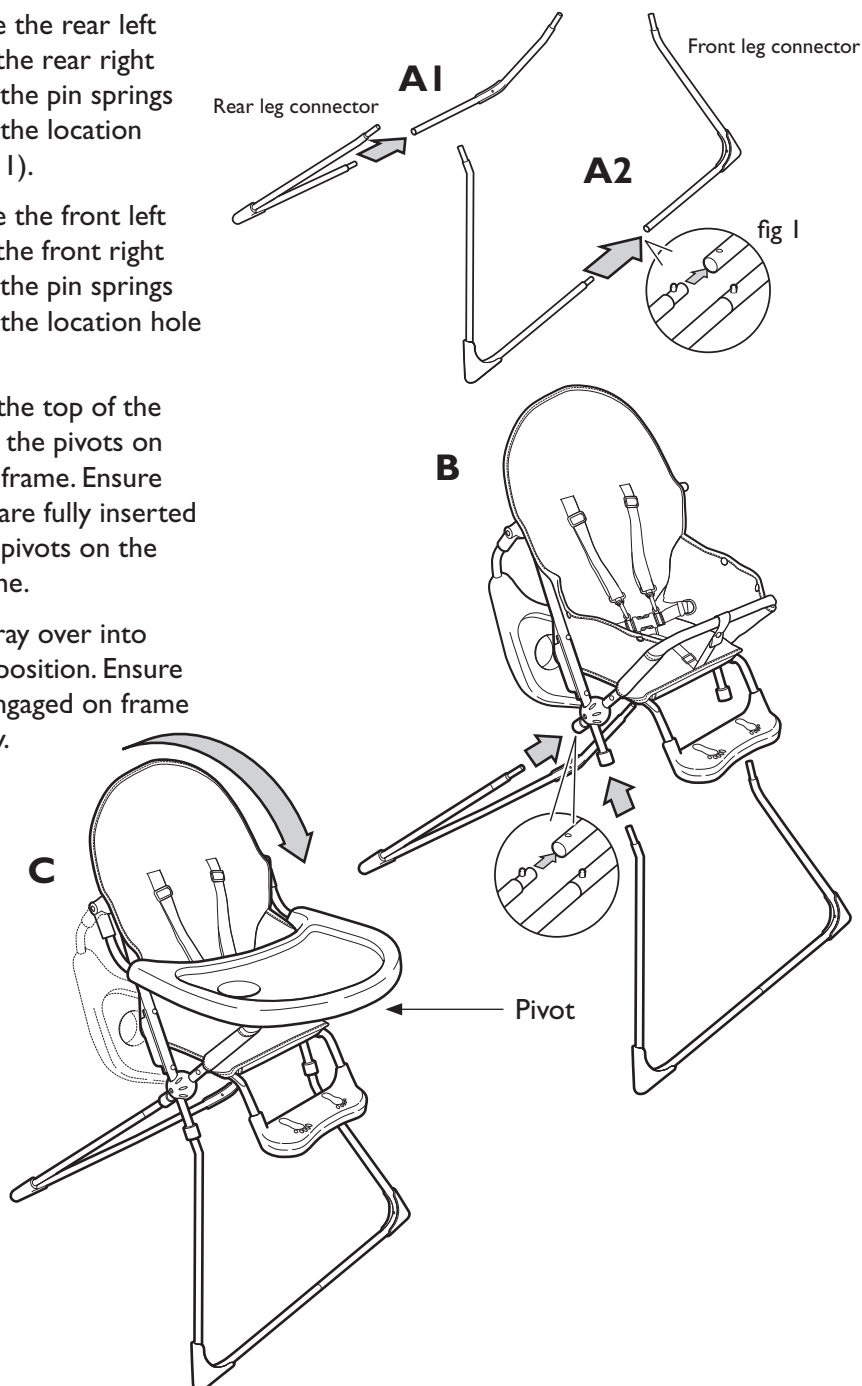

SECURING THE TRAY

A: Ensure tray is locked securely in position.

B: For extra security fasten all straps located on the underside of the tray to seat section.

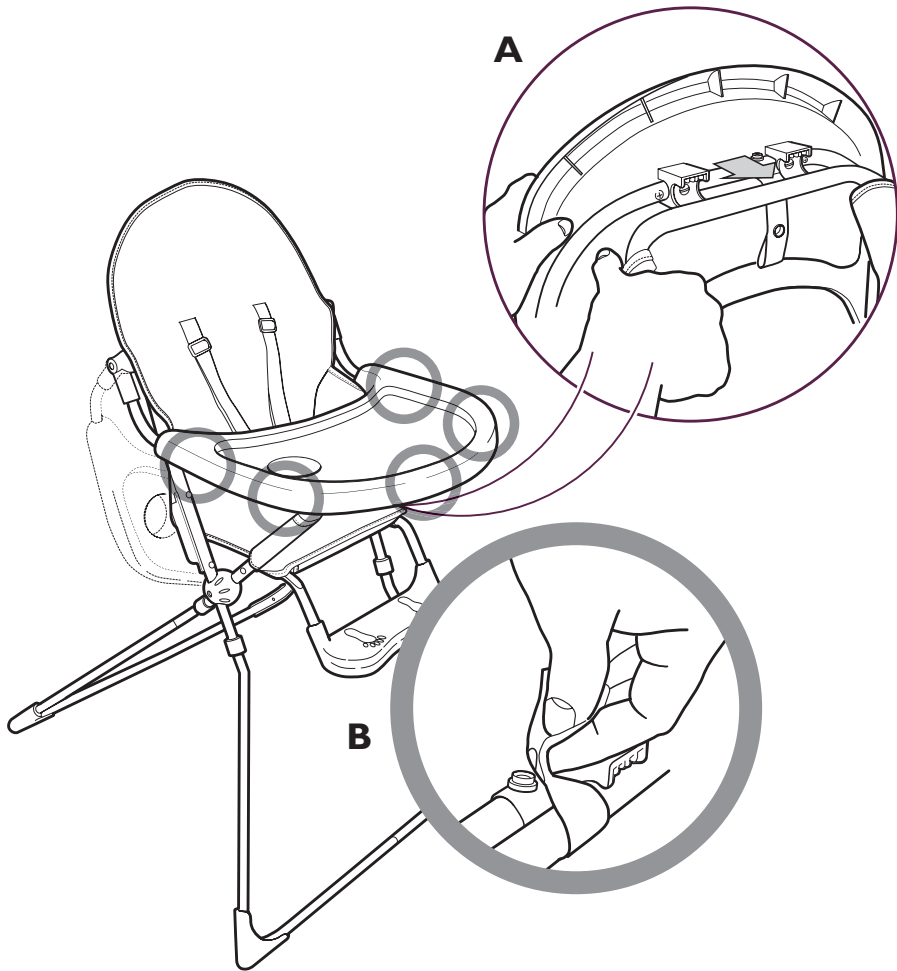

USING AND ADJUSTING THE HARNESS


Never place your child in the seat without fitting and adjusting the safety harness.

A: Locking the harness. Push the shoulder strap catch **1** into the locking catch **2** until it clicks into place. Repeat the process for the lock on the other side.

B: Locking the harness. Push the locking catch **3** into the buckle **4** until it clicks into place. Repeat the process for the lock on the other side.

C: Releasing the harness
Push the two tabs **5** on the locking catch inwards whilst pulling the two sections apart.

D: Adjusting the harness length
To loosen the harness feed the webbing back through the locking catch. To tighten the harness feed the webbing forward.

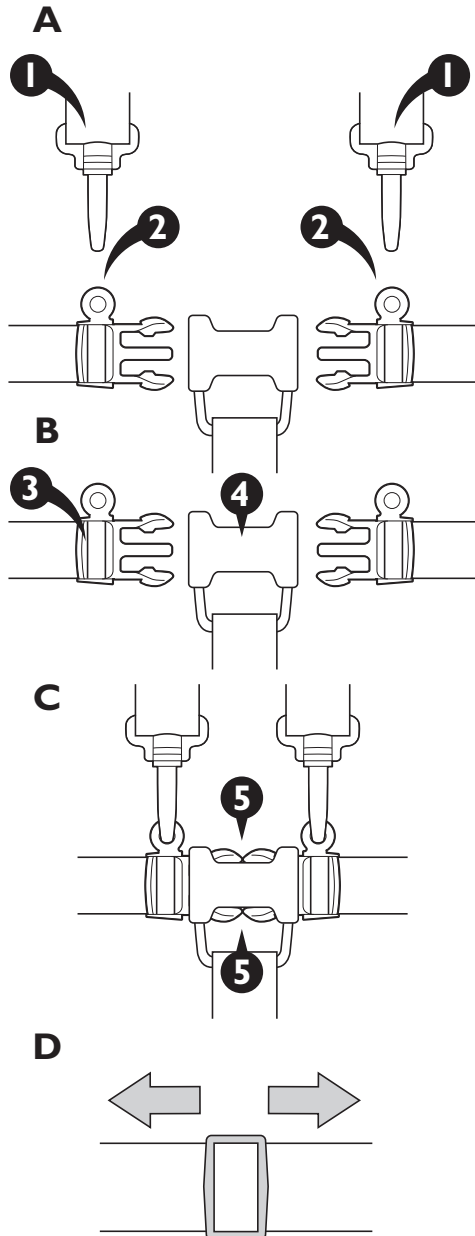



+44 (0)845 268 2000

Mamas & Papas Ltd, HD5 0RH, UK
customer.care@mamasandpapas.com
mamasandpapas.com