


Mamas & Papas[®]

Aria Twin


Instructions for safe use

ATPC 0143 1211 V18


1

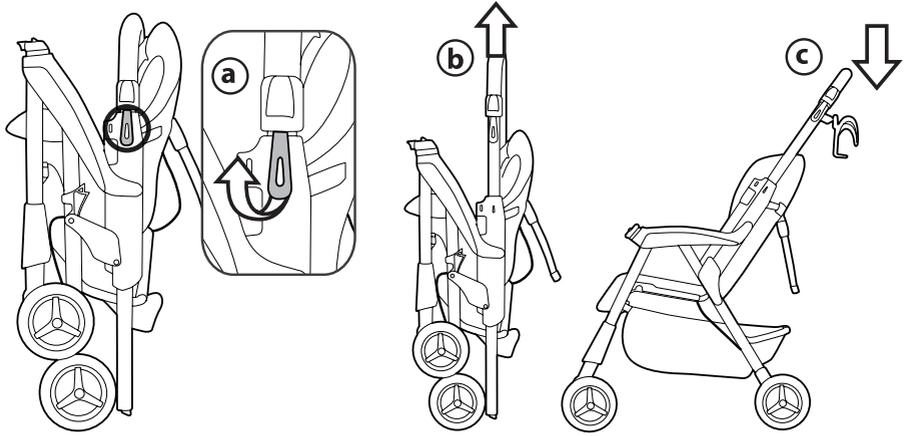


2

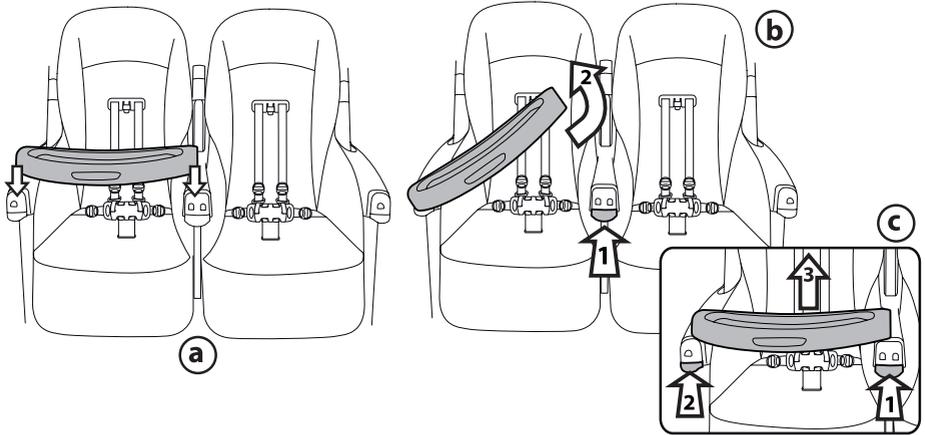


3

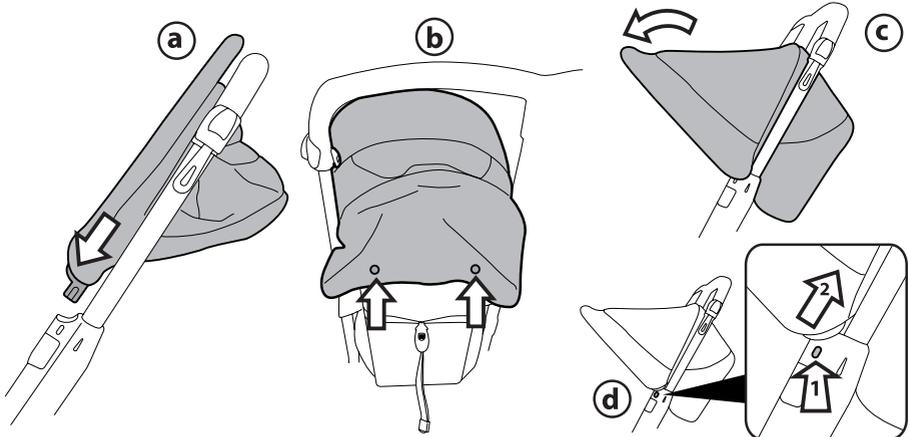


4

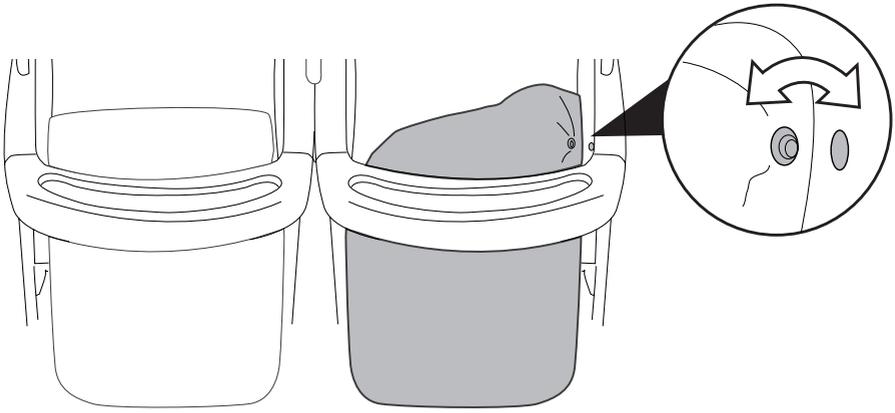


5

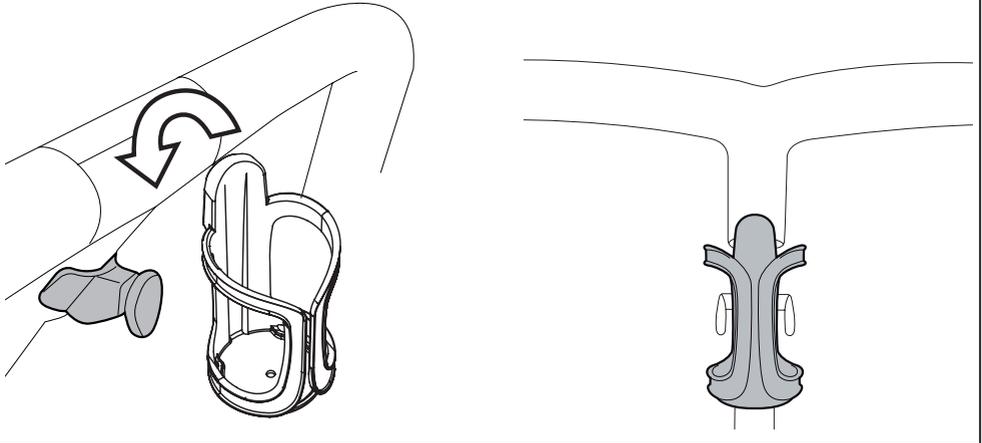


6

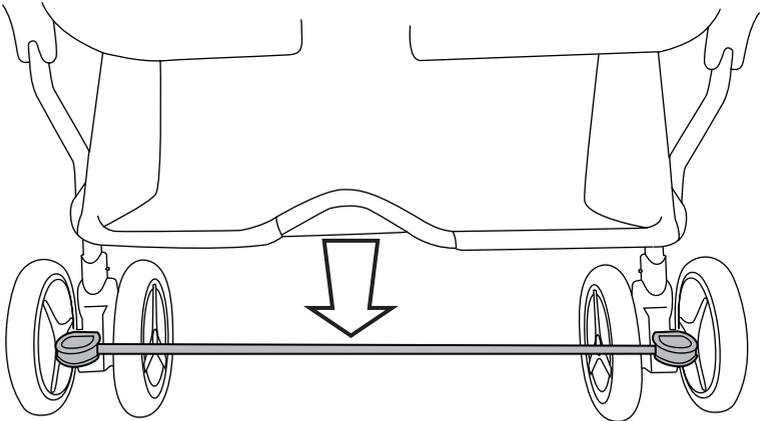


7

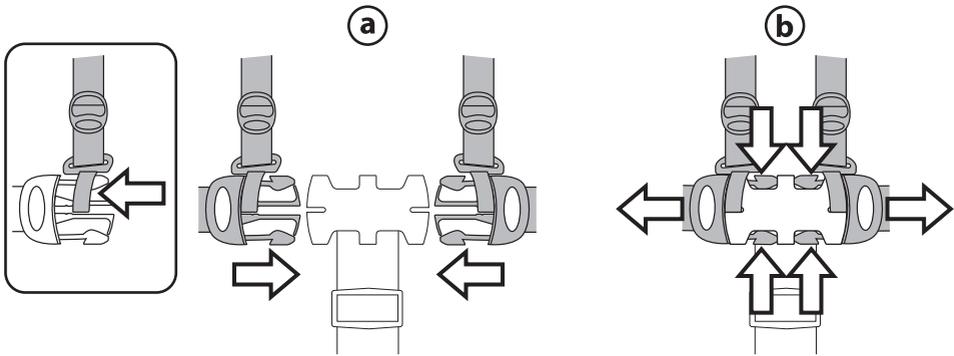



8

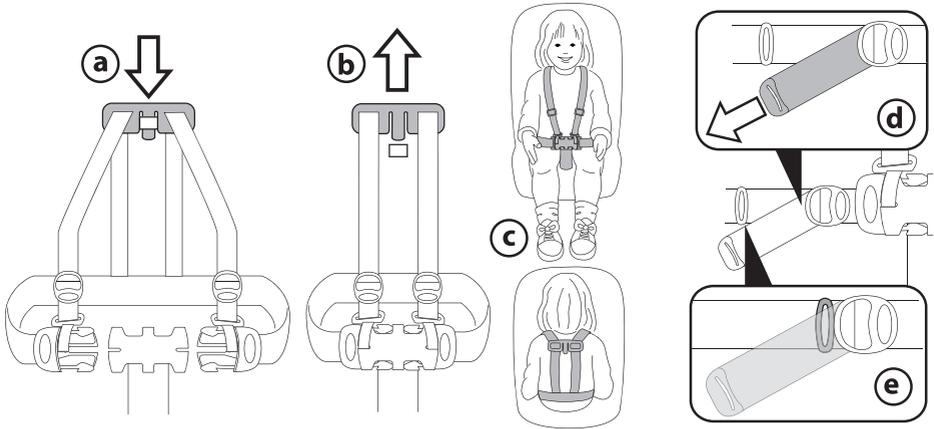



9

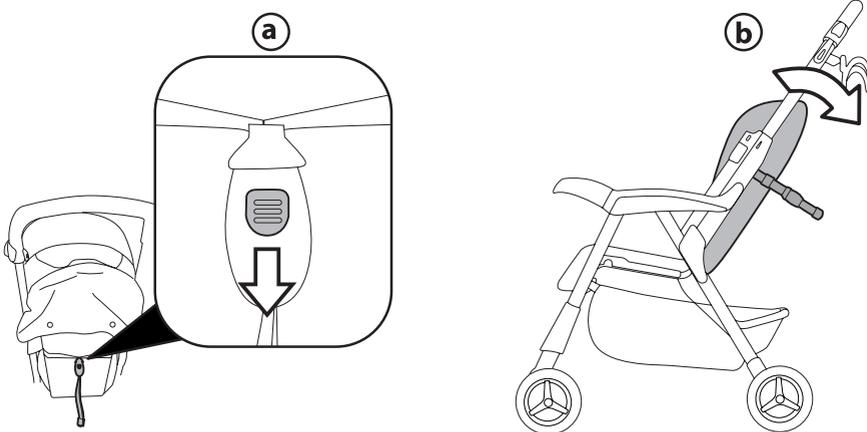



10

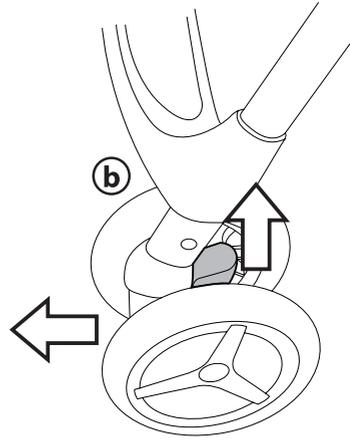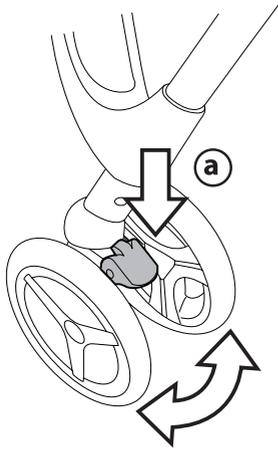


11

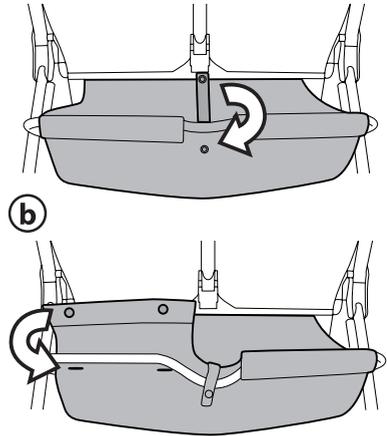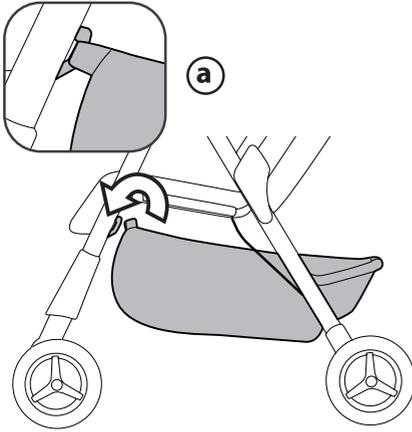


12

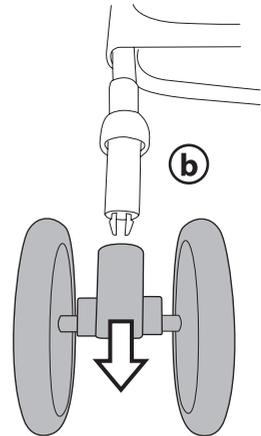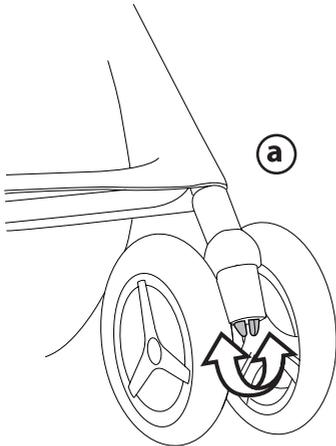


13

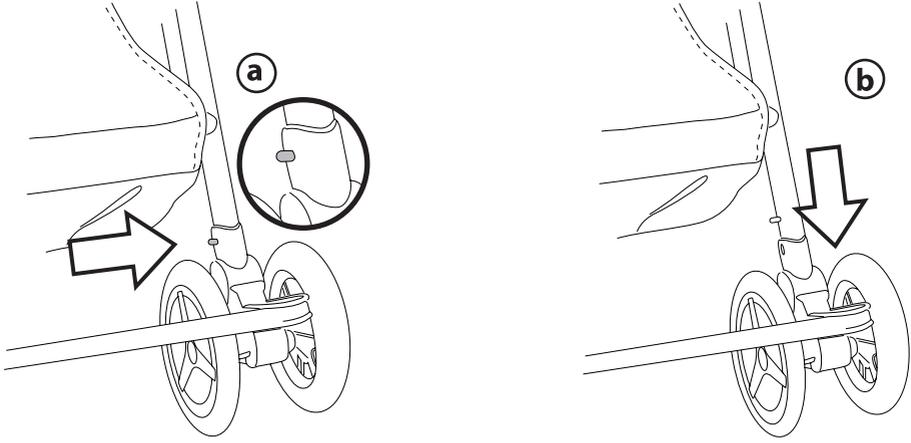


14

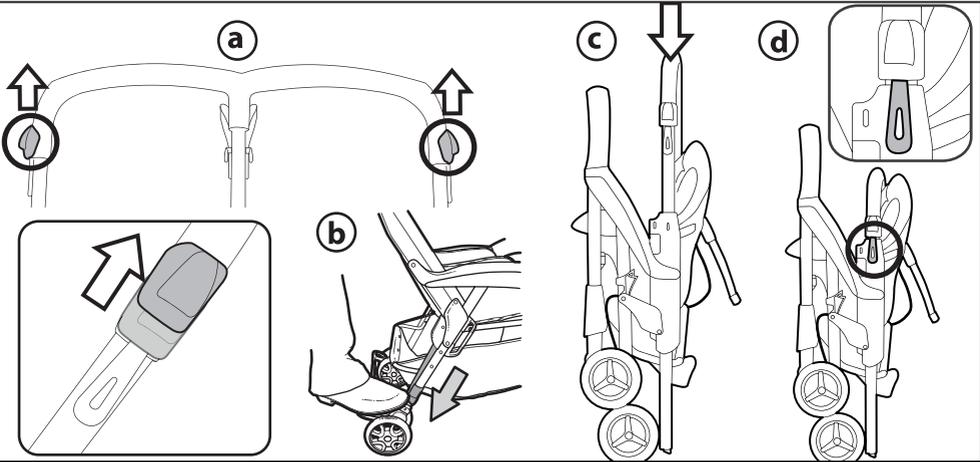


15

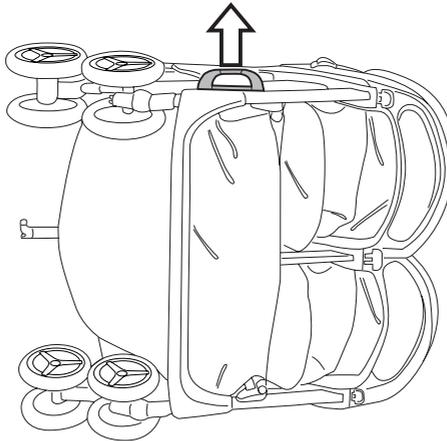


16

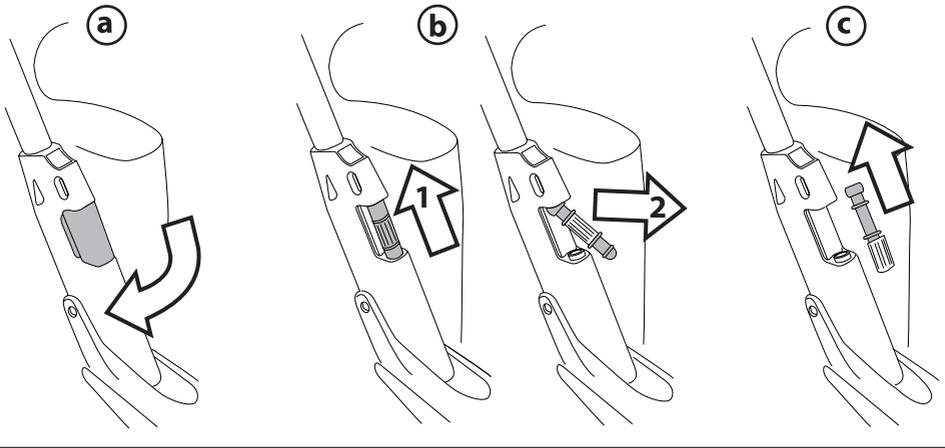

17

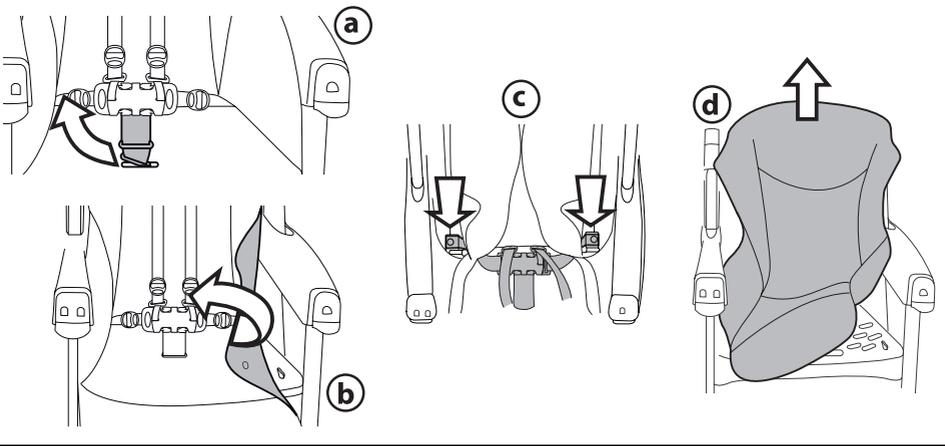

18

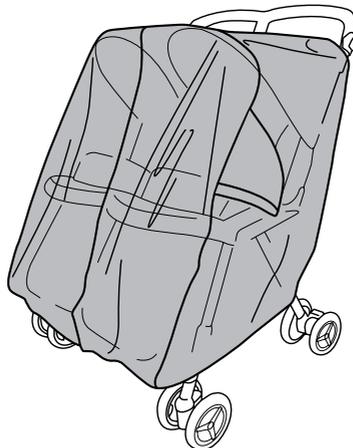

EN_English

Thank you for choosing a Peg-Pérego product.

WARNING

- **IMPORTANT: read the instructions carefully before use and keep them for future reference. The child may be hurt if you do not follow these instructions.**
- This item was designed for the transport of 2 children in the seat.
- Do not use this item for a number of occupants greater than that intended by the manufacturer.
- It may be dangerous to leave your child unattended.
- this seat is not suitable for children under 6 months
- Always use the 5-point harness and attach the waist strap to the leg divider strap.
- Be careful not to hurt the child when adjusting the mechanisms (handlebar, backrest).
- Always apply the brake when stopped and when positioning the child in the seat or when removing the child from the seat.
- Assembly and preparation of the product, plus cleaning and maintenance operations, must be carried out exclusively by adults.
- Do not use this item if there are parts missing or signs of breakage.
- Before use check that all the attachment mechanisms are correctly engaged.
- Do not insert fingers into the mechanisms.
- Any load hanging on the handlebar or the handles can make the stroller/carriage unstable; follow the manufacturer's instructions for max load capacity.
- Do not place loads over 5 kilos in the basket. Do not place in the bottle holder weights heavier than stated or hot drinks. Do not place in the hood pockets (if applicable) weights over 0.2 Kg.
- The front bar is not designed to support the child's weight. It is not designed to keep the child in the seat and does not substitute for the waist belt.
- Do not use the item near to stairs or steps, heat sources, naked flames or dangerous objects within reach of the child.
- The use of accessories not approved by the manufacturer could be dangerous.
- This item is not suitable for jogging or roller skating.
- Do not use the rain canopy (if present) indoors and regularly check to ensure the child is not too warm; do not park the stroller close to heat sources and keep well away from lighted cigarettes. Ensure the rain canopy is not interfering with any moving parts of the carriage or stroller; always remove the rain canopy before folding your carriage or stroller.

INSTRUCTIONS

- 1 **OPENING:** to open the stroller, simultaneously release the two fasteners (fig_a) and firmly lift the handlebar (fig_b), before pushing it down until the final click (fig_c).
- 2 **FRONT BAR-CHILD TRAY:** insert the front bars (fig_a). The front bar and child tray are independent, to meet the needs of any child; it is possible to open one at a time or remove one. To open the front bar-child tray on one side only, push the button and pivot the front bar outwards (fig_b). To remove the front bar-child tray, first push the central button and simultaneously lift the front bar; next push the side button and simultaneously pull out the front bar (fig_c). Do not place hot drinks on the front bar-child tray as this could be dangerous.
- 3 **HOODS:** the hoods are independent. One or both may

be lowered at any one time. Insert the hood clips into the appropriate housing (fig_a), button the hoods to the rear of the backrests (fig_b) and open by pulling forward (fig_c). To remove the hoods, push the side buttons and simultaneously slip the hood upwards (fig_d).

- 4 **COVER:** slide the cover on and button it at the side to the arms of the stroller.
- 5 **CUP-HOLDER:** to attach the cup-holder to the centre of the handlebar, place it in the appropriate housing, as in the figure.
- 6 **BRAKE:** Press down on the brake lever situated on the rear wheel unit to set the brake on the stroller. Lift the lever to release the brake. Always set the brake when the stroller is at a standstill.
- 7 **5-POINT SAFETY HARNESS:** to fasten, insert the two waist strap buckles (with shoulder straps attached) into the leg divider strap until you hear a click (fig_a). To release, press the sides of the buckle and simultaneously pull the waist strap outwards (fig_b).
- 8 To put on the safety harness, insert the strap adjuster into the slot in the backrest (fig_a) and remove it after fastening the harness to allow the child to move freely (fig_b). Place the strap adjuster just beneath child's shoulder level so the shoulder straps do not slide off (fig_c). To tighten the waist strap, pull in the direction of the arrow on both sides (fig_d). To loosen it do the opposite. The waist strap may be tightened up to the safety stop (fig_e).
- 9 **BACKREST ADJUSTMENT:** to recline the backrest, lower the backrest adjuster (fig_a) and simultaneously push the backrest down (fig_b). To lift the backrest, push the backrest adjuster up.
- 10 **SWIVEL WHEELS:** to make the front wheels swivel, lower the lever (fig_a). To fix them in place, lift the lever (fig_b).
- 11 **BASKET REPLACEMENT:** Should the basket need to be replaced, fasten it to the clips at the front (fig_a) and button it to the rear (fig_b).
- 12 **WHEEL REMOVAL:** the stroller wheels may be removed. To remove the front wheels, turn them to swivel position, push the levers (fig_a) and simultaneously push the wheel downwards until it is released (fig_b).
- 13 To remove the rear wheels, press the button (fig_a) and at the same time push the wheels down until they come off (fig_b).
- 14 **FOLDING:** before folding the stroller, close the hoods (if attached). To fold the stroller, lift the buttons on the sides of the handlebar (fig_a) and rotate the handlebar forward until it clicks. Push the backrest and the hoods towards the stroller and lower the handlebar until it slots into its housing (fig_b). Ensure the stroller is fully folded by checking the safety fastener (fig_c). The stroller is freestanding when folded up.
- 15 **TRANSPORT:** thanks to the carrying handle, transporting the folded stroller is very simple.
- 16 **REMOVABLE LINING:** to remove the stroller lining, first remove the hoods, then the cover on the side (fig_a). Push the pin upwards and then outwards (fig_b), and finally slip it out of the eyelet in the sack (fig_c). Do this on both sides and in the middle.
- 17 To detach the sack from the seat, remove the leg divider strap from under the seat (fig_a), and unbutton it (fig_b). Unscrew the safety harness from both sides (fig_c) and slip the sack off the seat (fig_d).

ACCESSORIES

- 18 **RAIN COVER:** transparent rain cover for the Aria Twin stroller.

CLEANING AND MAINTENANCE

PRODUCT MAINTENANCE: protect from the weather: water, rain, or snow; prolonged and continuous exposure to bright sunlight may give rise to colour changes of various different materials; store this product in a dry place.

CLEANING THE CHASSIS: periodically clean all plastic parts with a damp cloth. Do not use solvent or similar cleaning products; keep all metal parts dry to prevent rusting; keep moving parts clean (adjustment mechanisms, locking mechanisms, wheels, ...) and free of dust and sand and, if necessary, lubricate with light machine oil.

CLEANING THE RAIN CANOPY: wash with a sponge and soapy water; do not use detergents.

CLEANING FABRIC PARTS: brush fabric parts to remove dust and wash by hand at a maximum temperature of 30°C; do not wring; do not use chlorine bleach, do not iron; do not dry clean; do not apply solvent-based stain removers and do not dry in a tumble dryer.




/mamasandpapasuk



@mamasandpapas



mamasandpapasglobal







UK +44 (0)845 288 2000

USA 1-800-490-0331

AU 1300 663 034

CA 1-800-667-4111

Mamas & Papas Ltd, HD5 0RH, UK
mamasandpapas.com